

Inipi

Operating Instructions

Contents


1. Diagrams and Pictures	6
1.1 Configuration	6
1.2 Control panel / Remote-control	7
1.3 Display	8
1.4 Menu Hierarchy	9
2. For your Safety.....	10
2.1 Normal Use	10
2.2 Safety Instructions.....	10
3. Symbol Descriptions	11
4. Product Information.....	12
4.1 Controls	12
Remote-control with charging station	12
Control Panel	12
4.2 Scenarios.....	12
4.3 Heater with vaporiser.....	12
Warm-up time	13
Timer	13
Heating mode	13
Drying mode	13
4.4 Hourglass	13
4.5 Vaporiser	14
4.6 Lighting	14
Colours	14
Colour programs	14
4.7 Music	14
Soundscape	15
Radio	15
External audio source.....	15
4.8 PIN.....	15
4.9 Emergency Lighting.....	15
4.10 Notes about tightness (Inipi Ama)	15
5. Operation Basics	16
5.1 Buttons and their Functions	16
5.2 Operating Instructions.....	16
6. Initial Start-up of the Sauna.....	17
Step 1: Configure control panel.....	17
Step 2: Fill the vaporiser water tank	17

7. Operating the sauna.....	18
7.1 Switching on the sauna.....	18
7.2 Switching off the sauna	18
7.3 Switching on a scenario	18
7.4 Switching off a scenario	19
7.5 Changing a scenario	19
... permanently	19
... once / during a sauna session	19
7.6 Changing a scenario name	19
7.7 Resetting a scenario.....	20
7.8 Switching on the heater.....	20
... with preset bathing settings.....	20
... with manual temperature selection	20
7.9 Turning on the heater with the timer	20
7.10 Turning off timer for heater	21
7.11 Changing heating mode.....	21
7.12 Switching off the heater	21
7.13 Switching on lighting	21
Switching on colours	21
Switching on a colour program.....	22
7.14 Switching off lighting.....	22
7.15 Setting the intensity of the lighting	22
7.16 Switching on the timer	22
7.17 Switching on music.....	23
Switching on soundscapes.....	23
Switching on the radio.....	23
Playing from an external audio source.....	23
7.18 Switching off the music	23
7.19 Searching for and storing a radio station	23
7.20 Varying the sound volume	24
7.21 Setting the treble	24
7.22 Setting the bass.....	24
7.23 Starting vaporisation	24
7.24 Filling the vaporiser water tank / adding fragrant essential oils.....	24
7.25 Charging the remote-control.....	24
7.26 Connecting the remote-control with Bluetooth	25
8. Changing settings	25
8.1 Changing the time	25
8.2 Changing the time format	25


8.3	Displaying / hiding the time.....	26
8.4	Changing the date	26
8.5	Changing the units (°C/°F).....	26
8.6	Changing the language.....	26
8.7	Changing the intensity of the display.....	26
8.8	Changing the contrast of the display	27
8.9	Changing the PIN.....	27
8.10	Turning on the PIN-request	27
8.11	Turning off the PIN-request.....	27
8.12	Resetting back to defaults.....	28
8.13	Activating / deactivating the light ring on the charging station	28
9.	Cleaning and Maintenance.....	28
9.1	Outer front.....	28
	Natural wood	28
	High gloss varnish	29
	Melamine.....	29
9.2	Interior fittings	29
	Cabin floor	29
	Seating and floor grid.....	29
9.3	Vaporiser water tank	29
9.4	Control panel.....	29
9.5	Remote-control	29
9.6	Charging station	30
9.7	Glass.....	30
9.8	Acrylic.....	30
	Cleaning.....	30
	Damage	30
9.9	Tap fittings.....	30
10.	Disposal	31
11.	Troubleshooting	31
12.	Technical Data	32
12.1	Identification Plate	32
12.2	Sauna.....	32
	Specifications	32
	Automatic shut-down	32
12.3	Remote-control	32
12.4	Charging station	32
12.5	Interior fittings	33

1. Diagrams and Pictures


1.1 Configuration

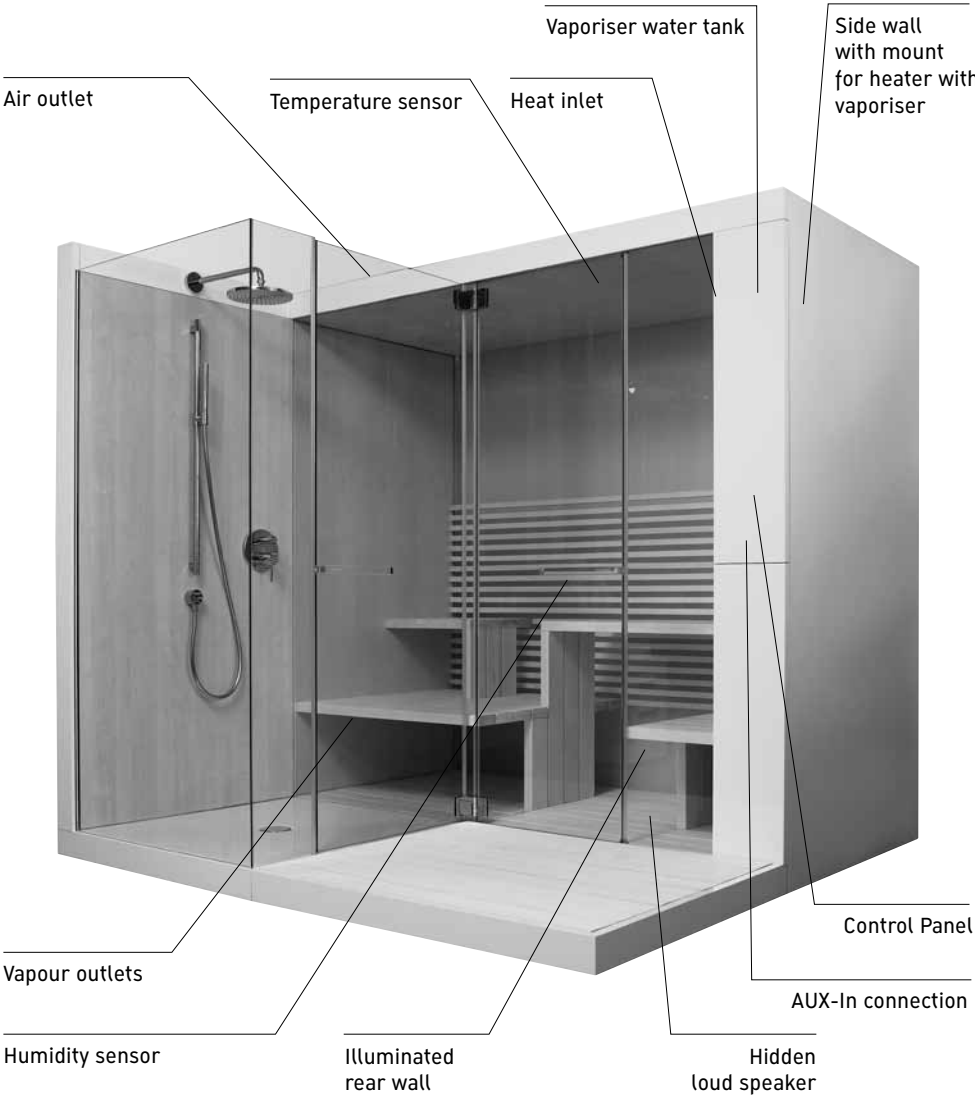

1.2 Control panel / Remote-control

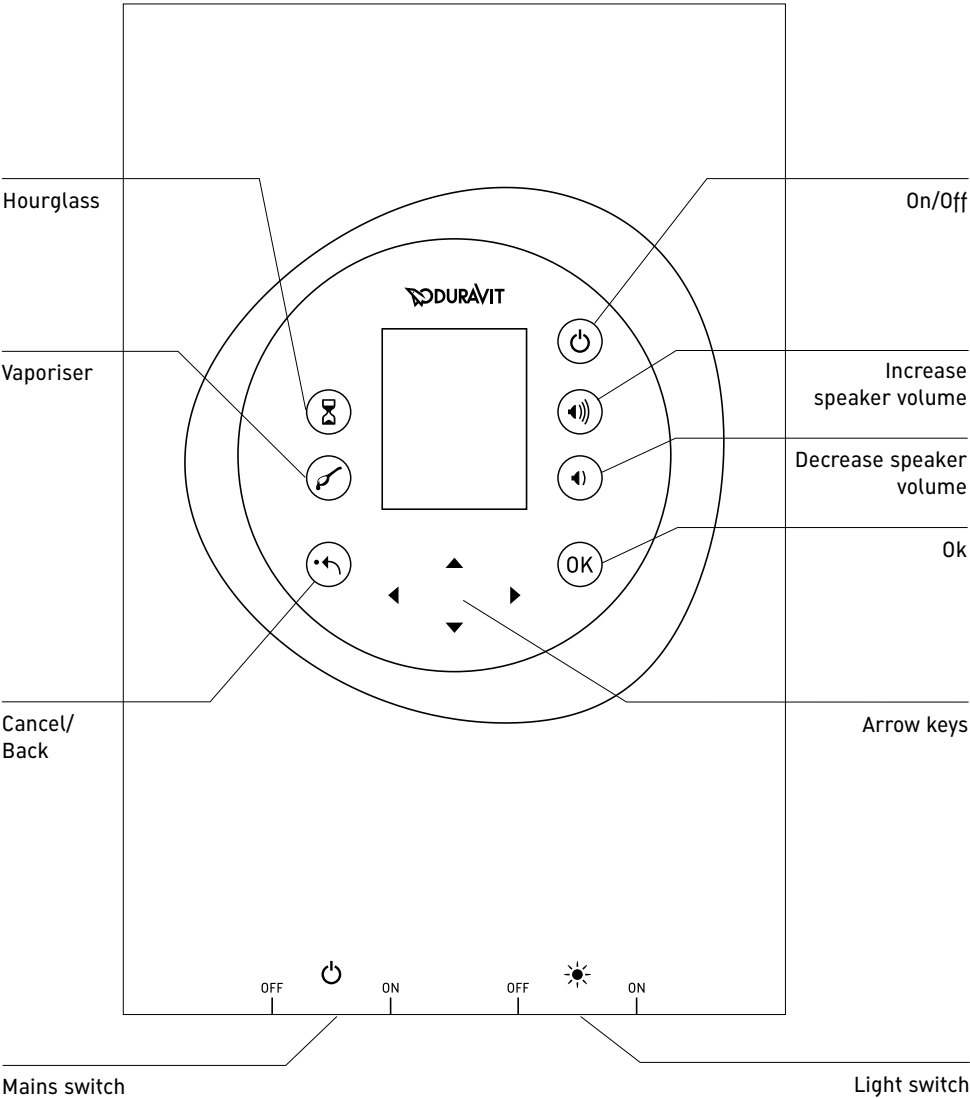


1.3 Display

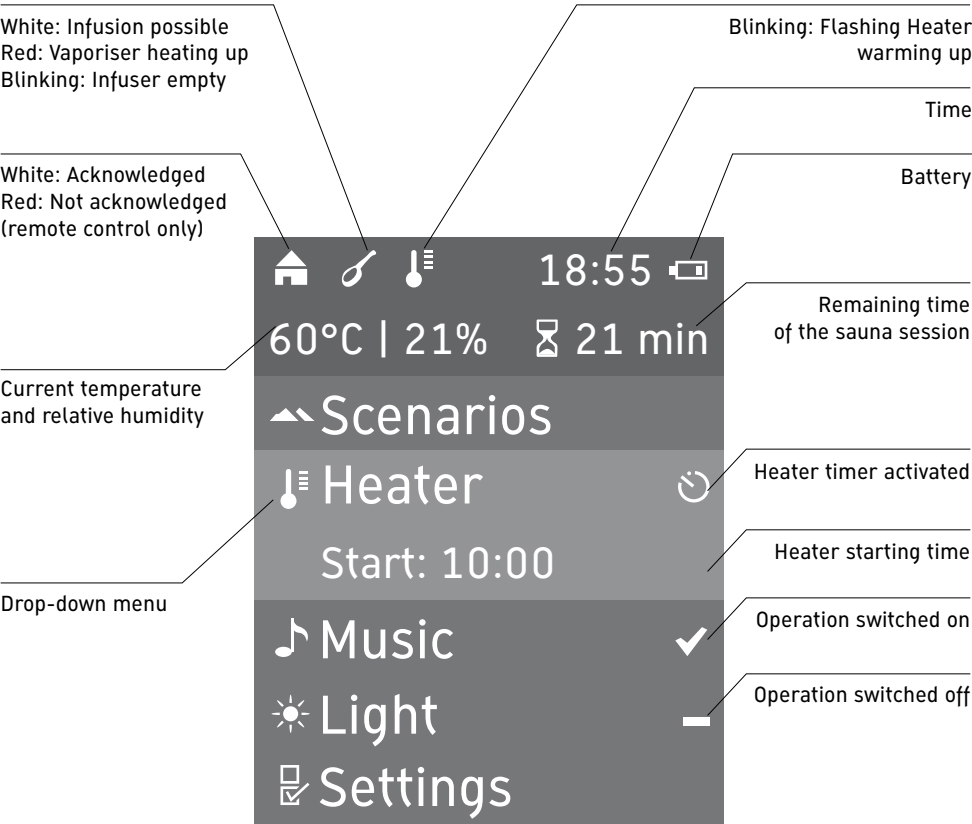

1.4 Menu Hierarchy

Start screen

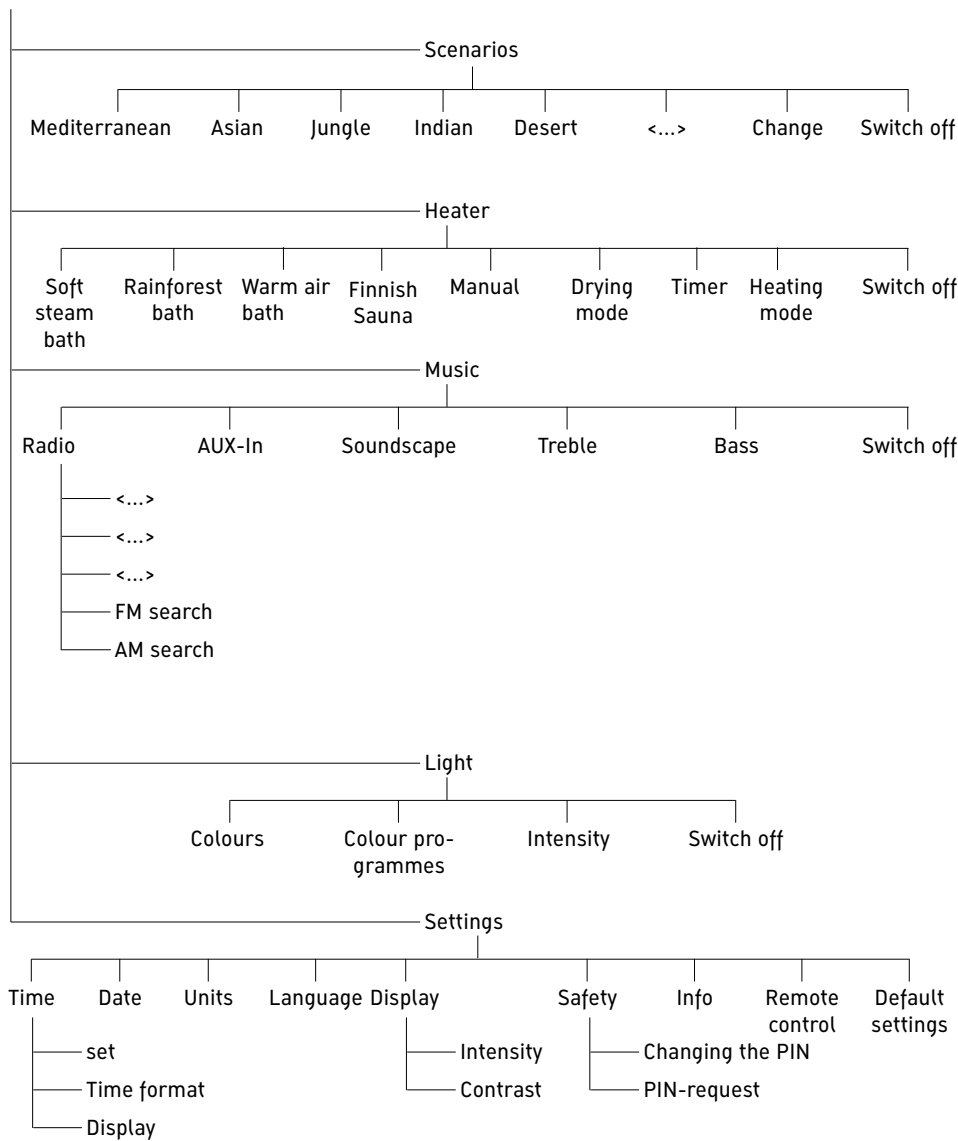

2. For your Safety

To ensure that you'll have many years of pleasure from your product, please read these operating instructions carefully, particularly the safety instructions.

Keep them in a safe place and in the case of a change in ownership, please ensure they are given to the new owner.

2.1 Normal Use

The sauna is to be used exclusively on private property, including a hotel room, in a residential home or other similar situations and is not to be used for medical purposes. Application is limited to indoors. It is suitable simply as a relaxing hot air bath.

Any other usage will be deemed as not corresponding with normal usage and Duravit AG undertakes no liability for abnormal usage.

2.2 Safety Instructions

Please read and comply with the following safety instruction!

The heater is a potential fire hazard.

- Ensure that the heat inlets are not covered and there is a free flow of air into the sauna before you switch on the heater.

This product is designed to be used only by adults.

- Children, elderly or infirm individuals or individuals with disabilities should only use the pool under supervision.

Only bathe when in good health.

- Consult your doctor before using the sauna if your health is in any way impaired, if you suffer from acute illnesses or infections, or if you are pregnant.

Microbial contamination of water in the vaporiser.

- Empty the vaporiser water tank after each sauna bath.

Cracks due to continuous humidity and sauna temperature!


- Leave the sauna cabin door open after each sauna bath to allow the humid air to escape.


Vaporiser module damage due to calcification from hard water (high calcium content).


- Only use distilled water in the vaporiser tank.

3. Symbol Descriptions

The following warning signs warn you of dangerous situations and their severity:

 **Danger!** High risk, lethal hazards, severe injuries.

 **Warning!** Medium risk, severe injuries.

 **Caution!** Low risk, minor injuries.

Note! Damage to property.

The following symbols are used:

i hints and tips here!

> a request for your input.

@ also take a look at the videos on www.duravit.com.



Items with this symbol cannot be mixed with household trash.

The characters beneath the trash bin stand for:

Cd: Battery contains cadmium

Hg: Battery contains mercury

Pb: Battery contains lead

4. Product Information

4.1 Controls

Remote-control with charging station

As a reminder of the American Indian origins of the sauna, the remote-control is shaped like a stone, a symbol of the American Indian's "sweat tent" stones. Using this you can control all the functions of the sauna.

A light ring is integrated into the charging station which shows the charging state and gives off a friendly, comforting light. If you wish it can be disabled.

Control Panel

There is a second set of controls behind the flap in the furniture. All sauna functions available on the remote-control can also be selected and started using the control panel.

4.2 Scenarios

You can store up to six different scenarios, with each scenario having different temperature, humidity, music and lighting. We have predefined five scenarios for you, you can select between Desert, Indian, Jungle, Asia and Mediterranean while the sixth scenario is not predefined. All six scenarios are individually variable and can also be reset to the original, predefined selection.

i You'll find descriptions of the scenarios in the Sauna Guide!

When changing between scenarios, it can take some time until the predefined values have been reached.

4.3 Heater with vaporiser

The heater is hidden in the side wall of the sauna. As well as heating the sauna cabin to up to 110°C (230°F), the vaporiser also enables the cabin humidity to be regulated between 10% and 45%, according to temperature and depending on the surrounding room environmental conditions. In addition there are four different bathing settings (Finnish Sauna, Warm Air Bath, Tropical Bath and Soft Bath).

- i You'll find descriptions of the bathing settings in the Sauna Guide!
The relative humidity can vary from the value you set, depending on the surrounding room environmental conditions.
- i The sauna continuously sucks in fresh air when being used. Make sure that no cold air (<18 °C) is sucked in, e.g. through an open window during the winter.

Warm-up time

The heat in a sauna is based on three concurrent sources: Firstly, the heater warms the air in the cabin (convection). The ceiling and walls absorb the air's heat and provide energy - in the form of radiant heat - to the sauna bathers. In addition, there is heat transfer by conduction: The heated benches transfer the stored heat directly to the bodies of the bathers. To charge the two heat sources - radiant heat and conduction - sufficiently, another warm-up period of 30 - 60 minutes is recommended after reaching the air temperature in the sauna. Overall, expect a warm-up period of 90-150 minutes for optimal through-heating (depending on environmental conditions): Then the sauna is „ripe“.

Timer

The timer allows you to restart the heater automatically within the next 24 hours. That way you can enjoy the sauna as soon as you get home after a long day.

Heating mode

Heater is active in power mode during the warm-up period. The heater automatically switches to whisper mode 10 minutes after its target temperature is reached. This makes the heater operate quietly in order to provide maximum comfort while bathing. You can also manually change the heating mode.

Drying mode

If the heater is turned off, the fan will run automatically for 15 minutes to dry the sauna. The drying mode can also be activated manually.

4.4 Hourglass

Using the hourglass integrated into the sauna control you can set a timer for your sauna session.

4.5 Vaporiser

Vaporisation is triggered by the press of a button on either the remote-control or the control panel, provided that the vaporiser water tank, located behind the flap in the furniture, is full.

4.6 Lighting

A coloured lighting system is a standard fitting in the sauna. This consists of LED elements that illuminate the entire rear wall of the sauna from below. You can choose between single colours or a colour program and vary the intensity of the colours.

Colours

You can define the colours of the light via a colour beam.

i The effect of the colours is discussed in the Sauna Guide!

Colour programs

- Colour Frenzy
changing light through a staccato progression of six colours:
white – blue – turquoise – green – yellow – red – violet – white – ...
The duration of the cycle can be varied between 5 and 22 seconds.
- Rainbow
changing light through a smooth progression of six colours:
white – blue – turquoise – green – yellow – red – violet – white – ...
The duration of the cycle can be varied between 5 and 22 seconds.
- Sunrise
a 15 minute simulation of the lighting characteristics during daybreak.
- Sunset
a 15 minute simulation of the lighting characteristics during Sunset.
- Pulsed colours
pulses of a selected colour with a variable loop time.

4.7 Music

The sauna is fitted with a sound system that you can use, either during a sauna or at other times, to listen to the soundscape, the radio or your favourite music. The

loudspeakers are hidden in the floor of the sauna.

Soundscape

The following soundscapes are available:

- Asia
- Desert
- Indian
- Jungle
- Mediterranean

i You'll find descriptions of the soundscapes in the Sauna Guide!

Radio

You can pre-tune three radio stations and search either the FM or AM bands.

External audio source

You can connect your music players (iPhone, mp3-player, HiFi system) via the AUX-In connection and listen to your favourite music.

4.8 PIN

In order to prevent unauthorised use of the sauna, a PIN-request can be activated. You will then need to enter the PIN in order to turn on the sauna.

4.9 Emergency Lighting

Emergency lighting will come on without the controls or the sauna needing to be switched on. This provides a degree of safety and protection in the case of an emergency. You can switch on the emergency lighting separately, e.g. when you're cleaning the sauna, and without having to switch on the whole sauna.

4.10 Notes about tightness (Inipi Ama)

The design of frameless shower partitions does not guarantee a hermetic seal. Splashes of water that occur while taking a shower are kept off. As with any other frameless shower partition, it is impossible to prevent some water from splashing out

because a water barrier such as a hermetically sealed profile frame is not desirable for exclusive shiny glass products due to the shape and design.

5. Operation Basics

5.1 Buttons and their Functions

- Switch on the sauna with the “on/off” button.
- Navigate in the menu using the arrow keys, the “OK” key and the “cancel/back” key:
 - Move between menu items with the “up” and “down” buttons.
 - Select a menu item with the “OK” button.
 - Set a value with the “right” and left” buttons.
 - Interrupt a series of steps or jump back to the previous menu item with the “cancel/back” button.
- Start vaporisation with the “vaporiser” button.
- Start the timer with the “hourglass” button.

5.2 Operating Instructions

We’ve condensed the menu navigation in the operating instructions in the subsequent chapters.

Where you read “Select” you need to carry out the following:

- > Press the “down” button until the required menu item is marked.
- > Press the “OK” button.

Example

- > Select **scenarios** > **change**.
- > Select the scenario you wish to change.

Do the following:

- > Press the “down” button until **scenario** is highlighted.
- > Press the “OK” button.
- > Press the “down” button until **change** is highlighted.
- > Press the “OK” button.
- > Press the “down” button until the scenario you want to change is highlighted.
- > Press the “OK” button.

6. Initial Start-up of the Sauna

Step 1: Configure control panel

- > Turn the mains switch to **ON**.
- > Turn the light switch to **ON**.
- > Press the "on/off" button.
All languages are listed on the display.
- > Select the language you wish to use.

Two alternative modes are listed on the display:

- Version home: the scenarios can be changed
 - Version hotel: the scenarios cannot be changed
- > Select the mode you wish to use.

"Adjust time" is displayed:

- > Press the "up" or "down" buttons until the first digit of the current time is displayed.
- > Press the "right" button to move to the next digit.
- > Repeat those last two steps until the current time is displayed.
- > Press the "OK" button.

"Adjust the date" is displayed:

- > Press the "up" or "down" buttons until the first digit of the current date is displayed.
- > Press the "right" button to move to the next digit.
- > Repeat those two steps until the current date is displayed.
- > Press the "OK" button.

Set units is displayed.

- > Select the required units.
You've now finished configuring the control panel.

Step 2: Fill the vaporiser water tank

- > Unscrew the vaporiser water tank from behind the flap in the furniture.
- > Fill the water tank with **distilled** water.
- > When required, add fragrant essential oils to the water, according to the manufacturers instructions.
- > Screw the water tank back in.
- > Empty the tank again immediately after a sauna bath!

7. Operating the sauna

7.1 Switching on the sauna

- > Turn the mains switch to **ON**.

- > Turn the light switch to **ON**.

The emergency light switches on and, while the control system is starting, the lights may flicker.

- > Press the "on/off" button.

The operating unit is switched on, the emergency light is switched off.

If you've activated a PIN-request, enter the PIN as follows:

- > Press the "up" or "down" buttons until the first digit of the PIN is displayed.

- > Press the "right" button to move to the next digit.

- > Repeat those last two steps until you have entered the PIN.

- > Press the "OK" button.

You can now switch on the separate parts of the sauna via a scenario or via functions (heater, lighting, music).

7.2 Switching off the sauna

- > Press the "on/off" button.

- > Select **switch-off**.

The sauna is switched off.

- > Turn the light switch to **OFF**.

The emergency light is switched off.

- > Turn the mains switch to **OFF**.

Power supply to the sauna is switched off.

7.3 Switching on a scenario

- > Select **scenarios**.

- > Select the scenario you wish to use.

Once the air temperature* is reached, the following is seen on the control panel: "Air temperature reached! Start scenario?".

- > Press the „OK“ button to confirm.

Perform other scenario settings.

- i If you would like to enjoy music or coloured lighting while the sauna is heating up, you can switch these on individually. Follow the instructions given under the individual functions.
- i *It may still take some time before the sauna is ready, refer to chapter titled „Product Information“ to learn more about the „warm-up period“.

7.4 Switching off a scenario

- > Select **scenarios** > **switch-off**.
The scenario is switched off.

7.5 Changing a scenario

... permanently

- > Select **scenarios** > **change**.
- > Select the scenario you wish to change.
- > Select the setting you wish to change.
- > Now you can change the setting: follow the instructions given under the individual functions.

... once / during a sauna session

Prerequisite: Scenario is switched off.

All functions (heater, music, lighting) can be changed. Follow the instructions given under the individual functions.

7.6 Changing a scenario name

- > Select **scenarios** > **change**.
- > Select the scenario you wish to change.
- > Select **change name**.
“Enter scenario name” is displayed on the control panel.
- > Press the “up” or “down” buttons until the correct character is displayed.
- > Press the “right” button to select the next digit.
- > Repeat the last two steps until you have entered the desired scenario name.
- > Press the “OK” button to confirm.

The scenario name is stored.

7.7 Resetting a scenario

- > Select **scenarios** > **change**.
- > Select the scenario you wish to change.
- > Select **reset**.
- > Press the "OK" button to confirm that you really do want to reset the settings.
Settings for the selected scenario are all reset to their defaults.

7.8 Switching on the heater

... with preset bathing settings

- > Select **heater**.
- > Select the desired bathing settings.
The heater heats up.

... with manual temperature selection

- > Select **heater** > **manual**
An X-Y coordinate axis is displayed.
- > Press the "up" or "down" buttons to set the temperature.
- > Press the "left" or "right" buttons to set the relative humidity.
- > Press the "OK" button.
The heater heats up.

7.9 Turning on the heater with the timer

- > Select **Heater** > **Timer**.
„Enter start time:" appears on the display.
Enter the time at which the heater should be turned on, as follows:
- > Press the „up" or „down" buttons until the first digit of the time is displayed.
- > Press the „right" button to select the next digit.
- > Repeat those last two steps until the correct time is displayed.
- > Press the „OK" button to confirm.
In the display grid will appear to set the desired temperature.
- > Press the „up" or „down" buttons to set the temperature.

- > Press the „right“ or „left“ buttons to set the relative humidity.
- > Press the „OK“ button.
The timer symbol appears in the display, and the start time appears in the drop-down menu.
- i The sauna must remain on in order to turn on the heater with the timer!

7.10 Turning off timer for heater

- > Select Heater > Timer > Switch off.
The heater is switched off.

7.11 Changing heating mode

- > Select Heater > Heating mode.
- > Select the desired heating mode.
The heating mode is switched on.

7.12 Switching off the heater

- > Select Heater > Switch off.
Drying mode starts and heater turns off after 15 minutes.
- i Would you like to switch off the heater immediately?
 - Select Heater > Switch off.

7.13 Switching on lighting

Switching on colours

- > Select **light** > **colours**.
A colour beam is displayed.
- > Press the “left” or “right” buttons to select the desired colour.
- > Press the “OK” button.
The lighting is switched on.

Switching on a colour program

- > Select **light > colour program**.
- > Select the desired colour program.

If you selected sunrise or sunset then you've finished.

The other colour programs require the following steps:

Rainbow or Colour Frenzy

- > Press the "left" or "right" buttons to set the speed of the colour change.
- > Press the "OK" button to confirm.

The lighting is switched on.

Pulsed colours

- > Press the "up" or "down" buttons to set the desired colour.
- > Press the "OK" button.
- > Press the "up" or "down" buttons to set the speed of the colour change.
- > Press the "OK" button to confirm.

The lighting is switched on.

7.14 Switching off lighting

- > Select **light > switch-off**. The lighting is switched off.

7.15 Setting the intensity of the lighting

- > Select **light > intensity**.
 - > Press the "left" or "right" buttons to select the desired intensity.
 - > Press the "OK" button.
- the intensity is changed.

7.16 Switching on the timer

- > Press the "hourglass" button.
- > Press the "left" or "right" buttons to select the desired duration of the sauna session.
- > Press the "OK" button.

The timer is switched on. The time remaining is displayed in the task bar.

7.17 Switching on music

Switching on soundscapes

- > Select **music** > **soundscapes**.
- > Select the desired soundscape.
Music is switched on.

Switching on the radio

- > Select **music** > **radio**.
- > Select the desired radio station.
Music is switched on.

Playing from an external audio source

- > Using an AUX adaptor connect the audio source to the AUX-In connector.
- > Select **music** > **AUX-In**.
The AUX-In is activated.
- > Operate the music device using its controls.

7.18 Switching off the music

- > Select **music** > **switch-off**. The music is switched off.

7.19 Searching for and storing a radio station

- > Select **music** > **radio** > **FM** or **AM search**.
"set frequency" is displayed.
- > Press the "left" or "right" buttons until the desired radio station is displayed.
- > Press the "OK" button to confirm.
"station number" is displayed.
- > Press the "left" or "right" buttons until the station number in which you wish to store the radio station is displayed.
- > Press the "OK" button.
The station is displayed in the radio sub-menu.

7.20 Varying the sound volume

- > Press the “sound volume plus” or “sound volume minus”.

7.21 Setting the treble

- > Select **music** > **treble**.
- > Press the “left” or “right” buttons until the desired setting is displayed.
- > Press the “OK” button.
The treble is changed.

7.22 Setting the bass

- > Select **music** > **bass**.
- > Press the “left” or “right” buttons until the desired setting is displayed.
- > Press the “OK” button.
The bass is changed.

7.23 Starting vaporisation

- > Press the “vaporiser” button.

7.24 Filling the vaporiser water tank / adding fragrant essential oils

- > Unscrew the vaporiser water tank from behind the flap in the furniture.
- > Fill the water tank with **distilled** water.
- > When required, add fragrant essential oils to the water, according to the manufacturers instructions.
- > Screw the water tank back in.
- > Empty the tank again immediately after a sauna bath!

7.25 Charging the remote-control

- > Place the remote-control on the charging station.

The light ring on the charging station blinks while the battery is charging.
As soon as the battery is fully charged the ring stays illuminated continuously.

7.26 Connecting the remote-control with Bluetooth

On the control panel:

- > Select **settings** > **remote-control**.

The Bluetooth address is displayed.

- > Note down the Bluetooth address (BT address).

On the remote-control:

- > Select **settings** > **remote-control**.

Enter the Bluetooth address you just read from the control panel:

- > Press the "up" or "down" buttons until the correct digit is displayed.
- > Press the "right" button to select the next digit.
- > Repeat those last two steps until you have entered the Bluetooth address.
- > Press the "OK" button.

The sauna controls now make a connection to the remote-control.

When the symbol "home" on the remote-control is green, it is within the reception range of the controls.

8. Changing settings

8.1 Changing the time

- > Select **settings** > **time** > **set**.
- > Press the "up" or "down" buttons until the first digit of the time is displayed.
- > Press the "right" button to select the next digit.
- > Repeat those last two steps until the correct time is displayed.
- > Press the "OK" button to confirm.

8.2 Changing the time format

- > Select **settings** > **time** > **time format**.
- > Select the desired time format.

8.3 Displaying / hiding the time

- > Select **settings** > **time** > **show/hide** > **show** or **hide**.
The time is either displayed or removed from the task bar.

8.4 Changing the date

- > Select **settings** > **date**.
- > Press the “up” or “down” buttons until the first digit of the date is displayed.
- > Press the “right” button to select the next digit.
- > Repeat those last two steps until the correct date is displayed.
- > Press the “OK” button to confirm.

8.5 Changing the units (°C/°F)

- > Select **settings** > **units**.
- > Select the units desired.

8.6 Changing the language

- > Select **settings** > **language**.
- > Select the desired language.
- i Selected the wrong language and you can't navigate to the Language menu?
 - > Press “down” and “OK” simultaneously.
You are now in the Language menu.
 - > Select the required language.
 - > Press the “OK” button.
The desired language is activated.

8.7 Changing the intensity of the display

- > Select **settings** > **display** > **intensity**.
- > Press the “left” or “right” buttons until the desired intensity is set.
- > Press the “OK” button to confirm.

8.8 Changing the contrast of the display

- > Select **settings** > **display** > **contrast**.
- > Press the "left" or "right" buttons until the desired contrast is set.
- > Press the "OK" button to confirm.

8.9 Changing the PIN

- > Select **settings** > **security** > **change PIN**.
Enter the current PIN:
 - > Press the "up" or "down" buttons until the first digit of the PIN is displayed.
 - > Press the "right" button to select the next digit.
 - > Repeat those last two steps until you have entered the PIN.
 - > Press the "OK" button.
 - > Enter the new PIN as just described.
 - > Press the "OK" button.
 - > Enter the new PIN a second time for verification, as just described.
 - > Press the "OK" button to confirm.

8.10 Turning on the PIN-request

- > Select **settings** > **security** > **PIN-request** > **on**.
Enter the 4 digit PIN:
 - > Press the "up" or "down" buttons until the first digit of the PIN is displayed.
 - > Press the "right" button to move to the next digit.
 - > Repeat those last two steps until you have entered the PIN.
 - > Press the "OK" button.
 - > Enter the new PIN a second time for verification, as just described.
 - > Press the "OK" button.

The PIN will be requested when attempting to turn on the sauna.

8.11 Turning off the PIN-request

- > Select **settings** > **security** > **PIN-request** > **off**.
For security reasons you must enter the PIN as follows:
 - > Press the "up" or "down" buttons until the first digit of the PIN is displayed.

- > Press the “right” button to select the next digit.
 - > Repeat those last two steps until you have entered the PIN.
 - > Press the “OK” button.
- The PIN will no longer be requested when attempting to turn on the sauna.

8.12 Resetting back to defaults

- > Select **settings** > **default** > **reset**.
To ensure the settings are not reset to their defaults by accident, the security code 2412 must be entered.
 - > Press the “up” or “down” buttons until the correct digit is displayed.
 - > Press the “right” button to select the next digit.
 - > Repeat the last two steps until you have entered the complete security code.
 - > Press the “OK” button.
- All settings are reset to their defaults.

8.13 Activating / deactivating the light ring on the charging station

- > Find a thin pin that fits through the small hole in the charging station located next to the power cable connector.
- > Press this pin through the hole for three seconds.

9. Cleaning and Maintenance

Note!

Damage to the surfaces through the use of the wrong cleaning fluids or detergents.

- Only use a cleaning fluid that is recommended by Duravit.
- Never use abrasive, aggressive or chemical cleaners.

9.1 Outer front

Natural wood

Natural wood is a living material. Variations in the structure, grain, porosity and colour, caused by nature, point to the authenticity of natural wooden materials.

- > Wash water deposits away immediately with a soft cloth.
- > Wipe the fronts with a damp chamois.
- > Remove stubborn soiling with hot water and dishwashing liquid as necessary.

High gloss varnish

- > Remove light soiling with a cloth.
- > Remove more extensive soiling with non-abrasive car polish but only in exceptional cases as frequent use will reduce the thickness of the varnish layer.

Melamine

- > Remove stubborn soiling with hot water and dishwashing liquid as necessary.

9.2 Interior fittings

Cabin floor

- > Remove the lower left seating surface.
- > Roll up the wooden grid of the cabin floor and remove it.
- > Clean the grey underfloor with a damp cloth.

Seating and floor grid

- > Remove more stubborn staining by sanding in the direction of the wood grain with sandpaper (grade 240).

9.3 Vaporiser water tank

- > Clean the water tank with warm water and a little dishwashing liquid.

9.4 Control panel

- > Clean the control panel with a soft, damp cloth.

9.5 Remote-control

- > Clean the remote-control with a soft, damp cloth.

9.6 Charging station



Danger!

Lethal danger when live electrical parts make contact with water.

- > Un-plug the charging station from the mains.
- > Remove light soiling with a soft, damp cloth.
- > Remove extensive staining by rubbing with a damp scouring sponge and scouring detergent.

9.7 Glass

- > After every shower, dry the glass surface with a glass wiper (only Inipi Ama).

9.8 Acrylic

Cleaning

- > Clean acrylic with a soft, damp cloth.
- > Use the Duravit Maintenance Set for Acrylic Surfaces for the occasional thorough cleaning and for removing stubborn spots.
- > Remove extensive soiling with warm water and a liquid detergent, dishwashing liquid or soap suds.

Damage

- > Remove scratches and other surface damage with the Duravit Acrylic Surface Maintenance and Repair Set.

9.9 Tap fittings

Note!

Damage to the surfaces through the use of the wrong cleaner!

- Do not use cleaners that
 - contain hydrochloric acid, formic acid or acetic acid.
 - contain phosphoric acid or chlorine bleach, or
 - work abrasively.
- Do not mix cleaners.
- Do not use pad sponges or micro fibre cloths.

- Do not use steam cleaners as the high temperature could damage the product
 - Spray cleaner onto the cloth and under no circumstances onto the tap fittings. The spray can penetrate openings and gaps in the taps and cause damage.
 - Take note of the cleaning instructions and the time taken to work under the specific conditions and do not allow the cleaner to remain on the surface longer than necessary.
- > Clean the taps regularly in order to prevent a calcification build up.
- > Follow the cleaning manufacturer's instructions.
- > Rinse with clean water to remove all traces of the cleaner.

10. Disposal



You have purchased a battery-powered remote control from us. Used batteries may not be mixed with household trash. You are required as a consumer to take batteries to a designated collection centre. You may return it at no charge to where the product was purchased or the collection/recycling centre in your community.

11. Troubleshooting

Problem	Potential cause	Solution	see page
Charging station not illuminated.	Light ring deactivated.	> Activate light ring.	28
Sauna does not respond to inputs from the remote-control.	Remote-control is not within the reception range of the sauna.	> Move the remote-control closer to the sauna until the "home" symbol is illuminated green.	
	Remote-control is not connected via Bluetooth.	> Connect the remote control via Bluetooth.	25
Failure report that cannot be remedied.		> Call customer service and report the error code.	

12. Technical Data

12.1 Identification Plate

The identification plate is on the back page of the Operators Manual.
This product conforms to all the appropriate EU guidelines.

DIN 18560	DIN EN 60335-2-53	DIN EN 60335-1
DIN EN 60529	DIN EN 55014-1	DIN EN 55014-2

12.2 Sauna

Specifications

Rated voltage	220-240 V
Frequency	50/60 Hz
Max. rated power	4.8kW
Protection class	IP X5
	Protection against sprayed water (from any direction)
Temperature range	15 - 40 °C

Automatic shut-down

Light	12 Hours
Heater	6 Hours

12.3 Remote-control

Temperature range	10-60°C
Rem. Ctrl. Prot. type	IP X8
Material	Epoxy resin

12.4 Charging station

Rated voltage	100-240 V
Frequency	50/60Hz
Rated power	20 W
Material	LG HI-MACS®

12.5 Interior fittings

Material	Aspen, birch
Loading	150 kg

Duravit AG
Werderstr. 36
78132 Hornberg
Germany
Phone +49 7833 70 0
Fax +49 7833 70 289
info@duravit.com
www.duravit.com

Duravit UK Limited
Unit 7, Stratus Park
Brudenell Drive
Brinklow, Milton Keynes
MK10 0DE
Phone +44 845 500 7787
Fax +44 845 550 7786
info@uk.duravit.com
www.duravit.co.uk

